
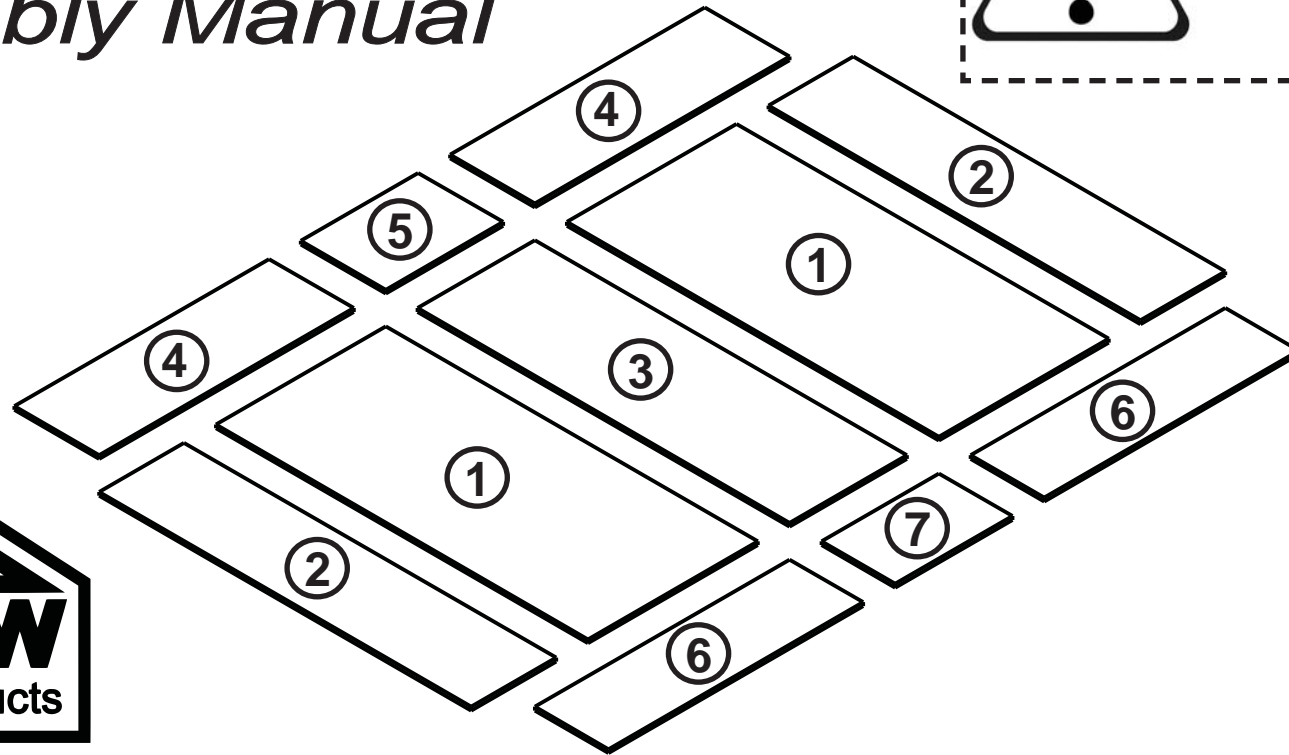


WOOD for FLOOR FRAME KIT

697.68388 & 697.68389

Assembly Manual

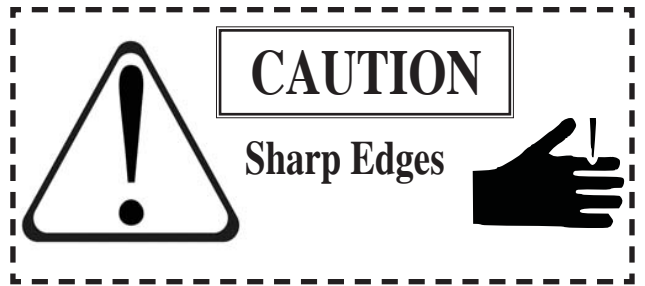

10 x 9 (3,05 m x 2,74 m) Building

KEY NO.	QTY.	PLYWOOD SIZE
1	2	32 x 70 1/8 (81,3 cm x 178,1 cm)
2	2	16 x 70 1/8 (40,6 cm x 178,1 cm)
3	1	22 1/8 x 70 1/8 (56,2 cm x 178,1 cm)
4	2	16 x 48 (40,6 cm x 121,9 cm)
5	1	16 x 22 1/8 (40,6 cm x 56,2 cm)
6	2	13 7/8 x 48 (35,2 cm x 121,9 cm)
7	1	13 7/8 x 22 1/8 (35,2 cm x 56,2 cm)
	228	1" (2,5 cm) drywall screws

10 x 10 (3,05 m x 3,05 m) Building

KEY NO.	QTY.	PLYWOOD SIZE
1	2	32 x 70 1/8 (81,3 cm x 178,1 cm)
2	2	16 x 70 1/8 (40,6 cm x 178,1 cm)
3	1	22 1/8 x 70 1/8 (56,2 cm x 178,1 cm)
4	2	20 3/4 x 48 (52,7 cm x 121,9 cm)
5	1	20 3/4 x 22 1/8 (52,7 cm x 56,2 cm)
6	2	18 5/8 x 48 (47,3 cm x 121,9 cm)
7	1	18 5/8 x 22 1/8 (47,3 cm x 56,2 cm)
	228	1" (2,5 cm) drywall screws

Before You Begin / Site Preparation

1. Before beginning construction, check local building codes regarding footings, location and other requirements. Study and understand this owner's manual.
2. Follow all directions and dimensions carefully.
3. Follow the step sequence carefully for correct results.
4. Be sure all the parts fit together properly before proceeding.
5. **IMPORTANT:** Remove Owner's Manual from main carton of your storage building and from your floor frame kit.
6. **SAFETY FIRST:** Care must be taken when handling various pieces of your kit since some contain sharp edges. Wear work gloves, eye protection and long sleeves when assembling or performing any maintenance on your kit.
7. **BASIC TOOLS:** No. 2 Phillips screwdriver, pliers, work gloves, tape measure, level and a spade or shovel.
8. **GROUND MUST BE LEVEL:** Be sure Floor Frames lie flat on ground. To prepare earth bed, remove sod and other debris. Level the high spots with flat shovel and tamp the bed down.
9. **DO NOT STEP ON CHANNELS UNTIL FLOORING MATERIAL IS IN PLACE!**
10. Separate contents of the carton by the part number while reviewing parts list. Check to be sure that you have all the necessary parts for your kit.

If you find a part missing
call: 1-800-851-1085 or assist@arrowsheds.com
or write
Arrow Shed, LLC
 1101 North 4th Street, Breese, Illinois 62230
Include Model Number, Part Number and Part Name

These instructions must be used along with your instructions from the floor frame kit 697.68385-A. Assemble your building before starting the floor frame kit. Follow all steps in 697.68385-A assembly manual except plywood installation. Use this instruction sheet for plywood installation.

10 x 9 (3,05 m x 2,74 m)

Sheet #4 16" x 48" (40,6 cm x 121,9 cm)		Sheet #5 16" x 22 1/8" (40,6 cm x 56,2 cm)		Sheet #4 16" x 48" (40,6 cm x 121,9 cm)	
Sheet #2 16" x 70 1/8" (40,6 cm x 178,1 cm)	Sheet #1 32" x 70 1/8" (81,3 cm x 178,1 cm)	Sheet #3 22 1/8" x 70 1/8" (56,2 cm x 178,1 cm)	Sheet #1 32" x 70 1/8" (81,3 cm x 178,1 cm)	Sheet #2 16" x 70 1/8" (40,6 cm x 178,1 cm)	
Sheet #6 13 7/8" x 48" (35,2 cm x 121,9 cm)		Sheet #7 13 7/8" x 22 1/8" (35,2 cm x 56,2 cm)		Sheet #6 13 7/8" x 48" (35,2 cm x 121,9 cm)	

10 x 10 (3,05 m x 3,05 m)

Sheet #4 20 3/4" x 48" (52,7 cm x 121,9 cm)		Sheet #5 20 3/4" x 22 1/8" (52,7 cm x 56,2 cm)		Sheet #4 20 3/4" x 48" (52,7 cm x 121,9 cm)	
Sheet #2 16" x 70 1/8" (40,6 cm x 178,1 cm)	Sheet #1 32" x 70 1/8" (81,3 cm x 178,1 cm)	Sheet #3 22 1/8" x 70 1/8" (56,2 cm x 178,1 cm)	Sheet #1 32" x 70 1/8" (81,3 cm x 178,1 cm)	Sheet #2 16" x 70 1/8" (40,6 cm x 178,1 cm)	
Sheet #6 18 5/8" x 48" (47,3 cm x 121,9 cm)		Sheet #7 18 5/8" x 22 1/8" (47,3 cm x 56,2 cm)		Sheet #6 18 5/8" x 48" (47,3 cm x 121,9 cm)	

Fasten plywood to frame with drywall screws.

